

MULTISENSOR QUAD

QUICK INSTALLATION GUIDE v1.3

TRADEMARKS

Zipato and the Zipato logo are registered Trademarks. All other product names mentioned herein may be trademarks or registered trademarks of their respective companies.

NOTICE

Although Zipato has attempted to ensure the accuracy of the content of this manual, it is possible that this document may contain technical inaccuracies, typographical, or other errors. Zipato assumes no liability for any error in this publication, and for damages, whether direct, indirect, incidental, and consequential or otherwise, that may result from such error, including, but not limited to loss of data or profits. Zipato provides this publication "as is" without warranty of any kind, either express or implied, including, but not limited to implied warranties of merchantability or fitness for a particular purpose. The published information in the manual is subject to change without notice. Zipato reserves the right to make changes in the product design, layout, and driver revisions without notification to its users. This version of the Installation guide supersedes all previous versions.

ELECTROMAGNETIC COMPATIBILITY

In proper state and when operated properly, the product complies with all the requirements in respect of interference radiation according to EN 301 489-17, EN 301 489-1 and EN 300 328. The connections conducting HF signals must neither be manipulated nor damaged.

TAKE CARE OF YOUR SAFETY

Display extreme caution when using ladders or steps, please follow manufacturer's instructions. Be careful when using hand and power tools and follow the manufacturer's guidelines when using them. Take care that the correct tools are used. Wear goggles or protective clothing where required.


INTRODUCTION

The 4 in 1 multi-sensor is designed to meet the requirement of integrate 4 sensors into one housing:

- (1) Door/window
- (2) PIR
- (3) illumination and
- (4) temperature

When the detector is cooperated with security appliances, the (1) Door/window or (2) PIR sensor act as an alarm detector. Alternatively, when the detector is worked with Z-Wave controller, the detector can be set to perform the role of home automation device by detecting both changes in PIR motion detect or door/window open close signal with percentage of illumination lux levels. One scenario is, once night falls, the percentage of ambient illumination is lower than preset value. If a person moves within or across the devices field of vision, a trigger radio signal will be transmitted so as to turn connected lightings for better illumination. Another scenario is to combine (1) Door/window (2) PIR (3) illumination sensors to recognize people is coming in or going out and turn the light on/off automatically. The temperature sensor can detect the temperature so as to adjust heater or cooler to achieve preset temperature or detect the abnormal environment temperature (like freeze sensor or fire sensor) to send the warning message.

 FIGURE 1
Dimensions (unit: mm)

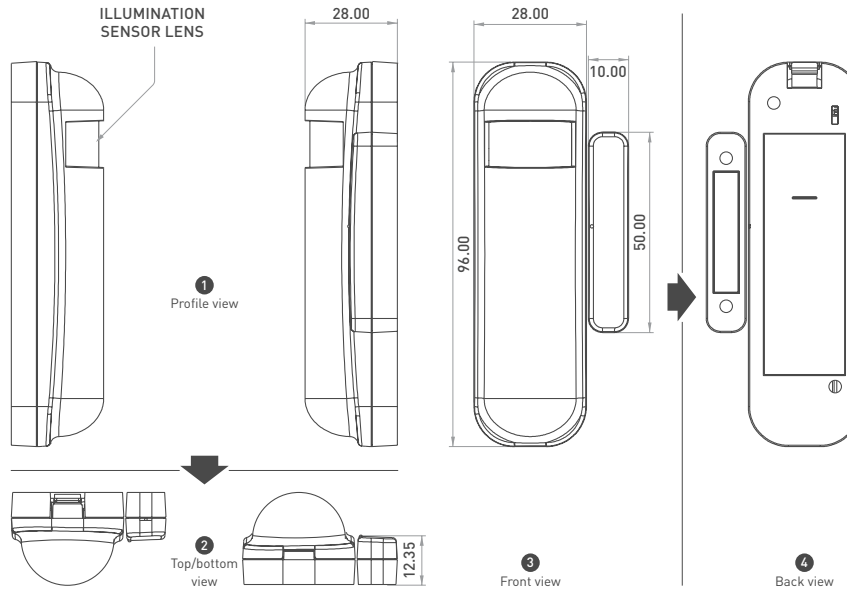

FEATURES

- (1) Door/window (2) PIR (3) illumination and (4) temperature functions in one sensor
- Adopt newest Z-wave 400 series chip, support multichannel operation and higher data rate (9.6/40/100kbps)
- Higher output power [+2.5dBm output power as compared to -2.5dBm 300 series Z-wave module] to enhance the communication range
- 1500mA CR123A lithium battery to guarantee 2 year battery life Built in light sensor while applied to light control
- Adopt Z-Wave protocol to secure the success of wireless two way communication
- With Tamper proof protection
- Easy install
- Low battery indication
- Z-Wave V6.02
- Z-Wave Certified No PSM02-1 ZC08-13050003
- Auto report the open/close status and battery status
- FCC part15.249 / EN300 220-1/ certification
- NCC

APPLICATION

PSM02 is a special device combining both PIR and Door/window functions. The benefits of combining Door/window with PIR in one sensor can be observed in the following scenarios:

- ▲ The ambient lighting would be lower than default setting value after sunset. If the PSM02 was installed on the inner side of door

in the house, PSM02 would detect coming in people, then the light would be turned on for the better illumination by radio transmission. Furthermore, PSM02 can be applied in a bathroom and it may turn on/off light and fan automatically.

- PSM02 can be taken as a portal chime at front desk of hotel or restaurant by sending out signal to IP-Gateway PSC01 as reminder which can be connected with speaker to turn the volume up. It can be kept silent when customer leaving.

■ For SMEs [Small and medium enterprises], PSM02 plays an important role in working hours and non-working hours. When non-working hours, PSM02 plays as security motion sensor, protects the office from intruders. At working hours, PSM02, 4 in 1 sensor, can be applied to curtain or heater/cooler controller for energy saving issue; although some people may use thermostat to control heater/cooler however, PSM02 sensor can be smarter choice. Since it can detect the people's, activities, and shutdown machine when no one exists or no movements.

- In the past, a digital home starter KIT includes many different sensors with very high price. Right now, Using the 4 in 1 patented sensor and a 4 in 1 gateway PSC01 [Siren + speaker + light + IP based controller] carry out home "security" + "safety" + "automation" in one box and provide customer full experience of digital life and flexibility in installation with affordable price.

TECHNICAL SUPPORT

Having trouble installing your new product?

Zipato's website contains the latest user documentation and software updates for Zipato products and services.

www.zipato.com

CONTACT SUPPORT

E-MAIL: support@zipato.com / [Mon-Fri] 9.00am-05.00pm [CET]

SPECIFICATION

POWER

OPERATING VOLTAGE	STANDBY CURRENT
3V CR123A	48 uA
OPERATING CURRENT	LOW BATTERY VOLTAGE
37mA	2.6V

RF

REGULATION

FCC part15.249 / EN300 220-1

DISTANCE

min. 40m indoor/min. 100m outdoor

MECHANICAL

WEIGHT	DIMENSION (W x H x D)
52 g	Detector 28 x 96 x 23 mm Magnet. 10 x 50 x 12 mm

BATTERY

CR123A	BATTERY LIFE
1500mAh	> 2 years

ENVIRONMENT

OPERATION TEMPERATURE	HUMIDITY
Normal environment temperature -10- 40° C to have better PIR and battery performance	85%RH max

TEMPERATURE

DETECT RANGE

-10-70°C

ILLUMINATION

RANGE

0-500 LX

PIR DETECTION ANGLE

HORIZONTAL

0° 8-10M
90° 6-8M

HARDWARE

MAGNETIC GAP (OPEN→CLOSE)	MAGNETIC GAP (CLOSE→OPEN)
28 MM	30 MM

MULTISENSOR QUAD

QUICK INSTALLATION GUIDE v1.3

POWER UP PROCEDURE

➔ BATTERY POWER CHECK

When the power up, the device will detect the power level of the battery immediately. If the power level is too low, the LED will continue flash about 5 seconds. Please change another new battery.

➔ PIR WARM UP

When the power on, the PIR need to warm up before operation. The warm up time about 1 minute, the LED will flash in every 2 seconds. After finish the procedure the LED will light ON three times

➔ NWI

When the power on, the device will check if it already adding to the network? If doesn't, it will auto start the NWI mode. The LED will flash in every second and continue 30 seconds. Until timeout or the device successful to inclusion by controller. You can press the tamper key 3 times to abort the NWI mode.

➔ WAKE

When the power on, the device will wake about 20 seconds. In this duration, the controller can communicate with the device. Normally the device is always sleeping to save the battery energy.

➔ FUNCTION DIP SWITCH

There is one function DIP switch in front of the device. Remove the front cover in the right top of the PCB, and also has mark "M1" and "M2" for two switch.

M1	M2	Description
ON	ON	Test Mode.
ON	OFF	Security Mode.
OFF	ON	Home Automation Mode
OFF	OFF	Program Mode. According to the configuration setting NO.5 to set the operation mode.

OPERATION MODE

There are three operation modes of the device. The user can choosing the suitable mode for application. There are three modes "Test", "Home Automation" and "Security". "Test Mode" is for the user test the sensor function when installation. "Home Automation Mode" focus in automatic to control the lighting equipment. For convenience and save energy. "Security Mode" focus in surveillance, warning.

When the event triggered, normally the LED won't indicated, unless the battery is in the low level, the LED will flash once. And in the "Test Mode" the LED also will light ON one second.

When the event triggered, the device will report the messages to the nodes in the group 1. The messages also include the temperature and the illumination level. The user can switch the report by configuration setting NO. 5. Caution: In the "Home Automation Mode" if the environment luminance higher than the setting, the device won't report the message.

When the event triggered, if the environment luminance is less than the setting of the configuration setting NO. 4, the device will emit the signal to turn ON the lighting equipment, those nodes in the group 2. And delay a while to turn OFF the lighting equipment. The delay time is setting by the configuration setting NO. 9.

The PIR motion re-detected interval, in the "Test Mode" fixed to 6 seconds. In the "Home Automation Mode", will start detect before turn OFF the lighting equipment. In the "Security Mode", according to the setting of configuration setting NO. 8.

 
Notice: When the tamper key of the back side is in the released state, the device always in the "Test Mode", no matter the DIP switch setting.

BATTERY INSTALLATION

When the device report the low battery message. The user should replace the battery to new one.


The way to open the front cover please follow below steps.

- Using a tool like [1] to press 1-1 till hear a click sound
- Hold the front cover and pull back
- Hold the front cover and pull up

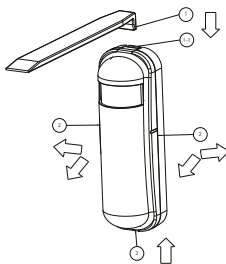

Replace the new battery and install the cover back.

 1. Put the front cover bottom to 1-1, and press down.
2. Push the front cover top to 2-1.

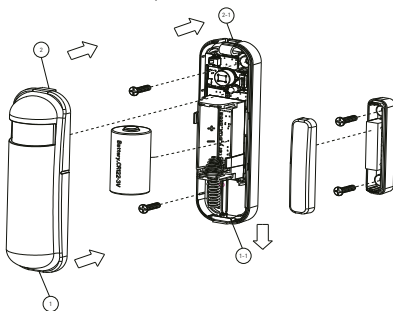

➔ CHOOSING A SUITABLE LOCATION

- The recommended mounting height is 160cm
- Don't let the device facing the window or the sunlight.

 
- Don't let the device facing the source of heat. Like heater.

INSTALLATION


■ In the first time, add the device into the Z-Wave network. First, make sure the primary controller is in the inclusion mode. And then power on the device, just take out the insulation Mylar in the back side of the device. And the device will auto start the NWI (Network Wide Inclusion) mode. And it should be included in 5 seconds. You will see the LED light ON one second.

■ Let Controller associate with Group 1 of the device, any light switch that intend to be turned on when the device trig please associate to Group 2 of the device.

■ In the accessory pack. There are two type of double coated tape, one is thicker [hereinafter referred to as A tape] and another is thinner [hereinafter referred to as B tape], you can use A tape for the test at the beginning. The right way for A tape installation is stick it to the position below tamper key. The thicker tape won't let the tamper key close, so the sensor will enter the test mode. You may test if installed position is good or not by this way.

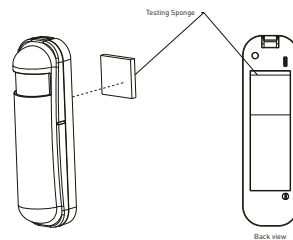

 After finish the test and decide to fix, then you can remove tape A, and mounting the sensor by using tape B. This will close the tamper key and let the sensor enter normal mode.

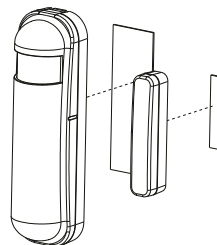

ADDING TO Z-WAVE NETWORK

There are two tamper keys in the device, one is in the back side, another is in the front side. They have the same function. Both of them can inclusion, exclusion, reset or association from Z-Wave network.

In the first time, add the device into the Z-Wave network. First, make sure the primary controller is in the inclusion mode. And then power on the device, just take out the insulation Mylar in the back side of the device. The device will auto start the NWI (Network Wide Inclusion) mode. And it should be included in 5 seconds. You will see the LED light ON one second.

➔ INCLUSION:

- Put the Z-Wave Controller in inclusion mode.
- Pressing tamper key three times within 1.5 seconds will enter inclusion mode.
- After inclusion successful, the device will wake to receive the setting command from Z-Wave Controller in about 20 seconds.

➔ EXCLUSION:

- Put the Z-Wave Controller in exclusion mode.
- Pressing tamper key three times within 1.5 seconds will enter exclusion mode. Node ID has been excluded.

➔ RESET:

- Pressing tamper key four times within 1.5 seconds and do not release the tamper key when you press it the 4th time, and the LED will turn ON.
- After 3 seconds the LED will turn OFF, after that within 2 seconds, release the tamper key. If successful, the LED will light ON one second. Otherwise, the LED will flash once.
- 3 IDs are excluded and all settings will reset to factory default.

➔ ASSOCIATION:

- Have Z-Wave Controller entered association mode.
- Pressing tamper key three times within 1.5 seconds will enter association mode.

Note: The device support 2 groups. The group 1 is for receiving the report message, like triggered event, temperature, illumination etc. The group 2 is for light control, the device will send the "Basic Set" command to this group.

Including a node ID allocated by Z-Wave Controller means inclusion. Excluding a node ID allocated by Z-Wave Controller means exclusion.

Failed or success in including/excluding the node ID can be viewed from Z-Wave Controller.

Notice: Always Reset a Z-Wave device before trying to add it to a Z-Wave network.

Notice: When the device into NWI mode, the sensor functionality will useless. The NWI mode will timeout after 30 seconds. You can press the tamper key 3 times to abort the NWI mode.

Z-WAVE NOTIFICATION

After the device adding to the network, it will wake-up once per day in default. When it wake-up it will broadcast the "Wake Up Notification" message to the network, and wake-up 10 seconds for receive the setting commands.

The wake-up interval minimum setting is 30 minutes, and maximum setting is 120 hours. And the interval step is 30 minutes. If the user want to wake-up the device immediately, please remove the front cover, and press the tamper key once. The device will wake-up 10 seconds.

Z-WAVE MESSAGE REPORT

➔ MOTION REPORT

When the PIR motion detected, the device will unsolicited to send the "Sensor Binary Report" to the nodes in the group 1.
Sensor Type: Motion [0x0C]
Sensor Value: 0xFF

➔ DOOR/WINDOW REPORT

When the Door/Window state changed, the device will unsolicited to send the "Sensor Binary Report" to the nodes in the group 1.
Sensor Type: Door/Window [0x0A]
Sensor Value: 0x00 is closed, 0xFF is opened.

MULTISENSOR QUAD

QUICK INSTALLATION GUIDE v1.3

⊕ TAMPER REPORT

When the 2 tamper keys in the device are pressed over 5 seconds. The device will into the alarm state. In that state, if any one of the tamper keys be released, the device will unsolicited to send the "Sensor Binary Report" to the nodes in the group 1.

Sensor Type: Tamper (0x08)
Sensor Value: 0xFF

⊕ TEMPERATURE REPORT

When the PIR motion detected or the door/window state changed, the device will unsolicited to send the "Sensor Multilevel Report" to the nodes in the group 1.

Sensor Type: Temperature (0x01)

Note: To disable this functionality by setting the configuration setting NO.5, the bit5 of the value to 1.

Temperature differential report

This function default is disabled, to enable by setting the configuration setting NO.6 bit6 to 1.

When the temperature plus or minus three degree Fahrenheit (1.67 degree Celsius), the device will report temperature information to the nodes in the group 1. The device will measure the temperature in every 64 seconds. And if the temperature is over 140 degree Fahrenheit (60 degree Celsius), the device also report in each measurement.

⊕ ILLUMINATION REPORT

When the PIR motion detected or the door/window state changed, the device will unsolicited to send the "Sensor Multilevel Report" to the nodes in the group 1.

Sensor Type: Luminance (0x03)

Note: To disable this functionality by setting the configuration setting NO.5, the bit4 of the value to 1.

⊕ TIMING REPORT

Beside the event triggered could report message, the device also support the timing unsolicited report of the status.

- Battery level report: Every 6 hours report once in default. It could be changed by configuration setting NO. 10.
- Low battery report: When the battery level is too low, every 30 minutes will report once.
- Door/window state report: Every 6 hours report once in default. It could be changed by configuration setting NO. 11.
- Illumination level report: Every 6 hours report once in default. It could be changed by configuration setting NO. 12.
- Temperature report: Every 6 hours report once in default. It could be changed by configuration setting NO. 13.

Z-WAVE CONFIGURATION SETTINGS

NOTICE: THE DATA SIZE OF THE CONFIGURATION SETTINGS IS 1.

NO.	Name	Default	Valid Values	Description
2	Basic Set Level	0xFF	1-100, 0xFF	Setting the BASIC command value to turn on the light. The 0xFF(-1) means turn on the light. For dimmer equipment 1 to 100 means the light strength.
3	PIR Sensitivity	70	0-99	PIR sensitivity settings. 0 means disable the PIR motion. 1 means the lowest sensitivity, 99 means the highest sensitivity. High sensitivity means can detected long distance, but if there is more noise signal in the environment, it will re-trigger too frequency.
4	Light Threshold	99	0-100	Setting the illumination threshold to turn on the light. When the event triggered and the environment illumination lower than the threshold, the device will turn on the light. 0 means turn off illumination detected function. And never turn on the light. 1 means darkest. 99 means brightest. 100 means turn off illumination detected function. And always turn on the light.
5	Operation Mode	0	0-127	Operation mode. Using bit to control. Bit0: 1 means security mode, 0 means home automation mode. Bit1: 1 means enable test mode, 0 means disable test mode. Note: Bit0 and bit1 will effect when the DIP Switch setting to program mode. If bit1 is enabled, the bit0 is useless.
6	Multi-Sensor Function Switch	4	0-127	Multi-Sensor function switch. Using bit to control. Bit0: Disable magnetic integrate illumination. Bit1: Disable PIR integrate illumination. Bit2: Disable magnetic integrate PIR (Default is Disable) Bit3: When Bit2 is 0 (Enable), the device is install in the same room with the light? 0: In the same room(Default),

				1: In the different room. Bit4: Disable delay 5 seconds to turn off the light, when door/window closed. Bit5: Disable auto turn off the light, after door/window opened to turn on the light. Note: If bit2 is zero, this setting is useless. Bit6: Enable temperature monitoring. When this bit enable, the temperature changed 3 degree Fahrenheit, it will report. And also the temperature over 140 degree Fahrenheit, it will report every 64 seconds.
7	Customer Function	4	0-0xFF	Customer function switch, using bit control. Bit2: Enable PIR super sensitivity mode.
8	PIR Re-Detect Interval Time	3	3-127	In the security mode, after the PIR motion detected, setting the re-detect time. 8 seconds per tick, and minimum time is 24 seconds, default tick is 3 (24 seconds). Setting the suitable value to prevent received the trigger signal too frequency. Also can save the battery energy. Note: If this value bigger than the configuration setting NO. 9, There is a period after the light turned off and the PIR not detecting.
9	Turn Off Light Time	4	4-127	After turn on the light, setting the delay time to turn off the light when the PIR motion is not detected. 8 seconds per tick, and minimum time is 32 seconds, default tick is 4 (32 seconds).
10	Auto Report Battery Time	12	1-127	The interval time for auto report the battery level. 30 minutes per tick and minimum time is 30 minutes, default tick is 12 (6 hours).
11	Auto Report Door/Window State Time	12	1-127	The interval time for auto report the door/window state. 30 minutes per tick and minimum time is 30 minutes, default tick is 12 (6 hours).
12	Auto Report Illumination Time	12	1-127	The interval time for auto report the illumination. 30 minutes per tick and minimum time is 30 minutes, default tick is 12 (6 hours).
13	Auto Report Temperature Time	12	1-127	The interval time for auto report the temperature. 30 minutes per tick and minimum time is 30 minutes, default tick is 12 (6 hours).

Z-WAVE MESSAGE REPORT

⊕ Z-WAVE SUPPORTED COMMAND CLASS

COMMAND_CLASS_CONFIGURATION
COMMAND_CLASS_VERSION
COMMAND_CLASS_SENSOR_BINARY_V2
COMMAND_CLASS_ASSOCIATION_V2
COMMAND_CLASS_MANUFACTURER_SPECIFIC_V2
COMMAND_CLASS_WAKE_UP_V2
COMMAND_CLASS_SENSOR_MULTILEVEL_V5
COMMAND_CLASS_BATTERY
COMMAND_CLASS_BASIC

MODELS AND FREQUENCIES

⊕ MODELS

EUROPEAN UNION - EU version	ph-psm02.eu
UNITED STATES - US version	ph-psm02.us
RUSSIA - RU version	ph-psm02.ru
ISRAEL - IS version	ph-psm02.is
AUSTRALIA - AU version	ph-psm02.au
INDIA - IN version	ph-psm02.in

⊕ FREQUENCIES

EUROPEAN UNION - EU	868.42 MHz
UNITED STATES - US	908.42MHz
RUSSIA - RU	869.02MHz
ISRAEL - IS	916.02MHz
AUSTRALIA - AU	921.42MHz
INDIA - IN	865.20MHz

LIMITED PRODUCT WARRANTY

⊕ GENERAL TERMS

Nothing in this Limited Product Warranty affects your statutory rights as a consumer.

The Limited Product Warranty set forth below is given by Tri plus grupa d.o.o. [Europe] (herein referred to as "ZIPATO"). This Limited Product Warranty is only effective upon presentation of the proof of purchase. Upon further request by ZIPATO, this warranty card has to be presented, too.

EXCEPT AS EXPRESSLY SET FORTH IN THIS LIMITED WARRANTY, ZIPATO MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ZIPATO EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY, ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD, TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES AGAINST ZIPATO. THEY DO NOT, HOWEVER, AFFECT OR RESTRICT THE RIGHTS YOU HAVE AGAINST THE BUSINESS YOU BOUGHT A ZIPATO PRODUCT FROM. IN NO EVENT WILL ZIPATO BE LIABLE FOR LOSS OF DATA OR FOR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. HOWEVER, NOTHING IN THIS AGREEMENT LIMITS ZIPATO'S LIABILITY TO YOU (I) IN THE EVENT OF DEATH OR PERSONAL INJURY TO THE EXTENT RESULTING FROM ZIPATO'S NEGLIGENCE, OR (II) TO THE EXTENT RESULTING FROM ANY FRAUDULENT MISREPRESENTATION ON THE PART OF ZIPATO, OR (III) TO THE EXTENT ARISING UNDER PART 1 OF THE CONSUMER PROTECTION ACT 1987 OF THE UNITED KINGDOM. SOME STATES OR COUNTRIES DO NOT ALLOW: (1) A DISCLAIMER OF IMPLIED WARRANTIES; (2)

MULTISENSOR QUAD

QUICK INSTALLATION GUIDE v1.3

A LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION; OR (3) LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS. IN SUCH STATES OR COUNTRIES, SOME EXCLUSIONS OR LIMITATIONS OF THIS LIMITED WARRANTY MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE OR FROM COUNTRY TO COUNTRY. YOU ARE ADVISED TO CONSULT APPLICABLE STATE OR COUNTRY LAWS FOR A FULL DETERMINATION OF YOUR RIGHTS.

This Limited Product Warranty applies to ZIPATO branded hardware products (collectively referred to as "ZIPATO Hardware Products") sold by ZIPATO (Europe), its European subsidiaries, affiliates, authorized resellers, or country distributors (collectively referred to as "ZIPATO Resellers") with this Limited Product Warranty.

The term "ZIPATO Hardware Product" is limited to the hardware components and all its internal components including firmware. The term "ZIPATO Hardware Product" DOES NOT include any software applications or programs.

➔ GEOGRAPHICAL SCOPE OF THE LIMITED PRODUCT WARRANTY

This Limited Product Warranty is applicable to Hardware Products sold by Zipato Resellers in all countries listed at the beginning of this document under the heading "Countries in which this ZIPATO Limited Product Warranty applies". The Limited Product Warranty will be honored in any country where ZIPATO or its authorized service providers offer warranty service subject to the terms and conditions set forth in this Limited Product Warranty. However, warranty service availability and response times may vary from country to country and may also be subject to registration requirements.

➔ LIMITATION OF PRODUCT WARRANTY

ZIPATO warrants that the products described below under normal use are free from material defects in materials and workmanship during the Limited Product Warranty Period set forth below ("Limited Product Warranty Period"), if the product is used and serviced in accordance with the user manual and other documentation provided to the purchaser at the time of purchase (or as amended from time to time).

ZIPATO does not warrant that the products will operate uninterrupted or error-free or that all deficiencies, errors, defects or non-conformities will be corrected.

This warranty shall not apply to problems resulting from: (a) unauthorized alterations or attachments; (b) negligence, abuse or misuse, including failure to operate the product in accordance with specifications or interface requirements; (c) improper handling; (d) failure of goods or services not obtained from ZIPATO or not subject to a then-effective ZIPATO warranty or maintenance agreement; (e) improper use or storage; or (f) fire, water, acts of God or other catastrophic events. This warranty shall also not apply to any particular product if any ZIPATO serial number has been removed or defaced in any way.

ZIPATO IS NOT RESPONSIBLE FOR DAMAGE THAT OCCURS AS A

RESULT OF YOUR FAILURE TO FOLLOW THE INSTRUCTIONS FOR THE ZIPATO HARDWARE PRODUCT.

➔ LIMITED PRODUCT WARRANTY PERIOD

The Limited Product Warranty Period starts on the date of purchase from ZIPATO. Your dated sales or delivery receipt, showing the date of purchase of the product, is your proof of the purchase date. You may be required to provide proof of purchase as a condition of receiving warranty service. You are entitled to warranty service according to the terms and conditions of this document if a repair to your ZIPATO branded hardware is required within the Limited Product Warranty Period.

[Other than in respect of products for domestic use (in particular those listed in the first and last boxes in the table below), this Limited Product Warranty extends only to the original end user purchaser of this ZIPATO Hardware Product and is not transferable to anyone who obtains ownership of the ZIPATO Hardware Product from the original end-user purchaser.

➔ PRODUCT WARRANTY PERIOD TABLE

PRODUCT TYPE	Multisensor Quad
PRODUCT WARRANTY PERIOD	One (1) year

IMPORTANT

The content of "Product Type" listed above is subject to change; please refer to the www.zipato.com for latest update.

➔ PERFORMANCE OF THE LIMITED PRODUCT WARRANTY

If a product defect occurs, ZIPATO's sole obligation shall be to repair or replace any defective Zipato Hardware Product free of charge provided it is returned to an Authorized ZIPATO Service Centre during the Limited Warranty Period. Such repair or replacement will be rendered by ZIPATO at an Authorized ZIPATO Service Centre. All component parts or hardware products that are replaced under this Limited Product Warranty become the property of ZIPATO. The replacement part or product takes on the remaining Limited Warranty Period of the replaced part or product. The replacement product need not be new or of an identical make, model or part; ZIPATO may in its discretion replace the defective product (or any part thereof) with any reconditioned equivalent (or superior) product in all material respects to the defective product.

WARRANTOR

Tri plus grupa d.o.o.
Banjaveciva 11
10 000 Zagreb
CROATIA

TEL +385 (0)1 4004 404
FAX +385 (0)1 4004 405

DECLARATION OF CONFORMITY

The Manufacturer Tri plus grupa d.o.o. hereby declares that the product:
Zipabox Smart home controller 1



In accordance with the following Directives: 2006/95/EC The Low Voltage Directive, 89/334/EEC The Electromagnetic Compatibility Directive and 1999/5/EC R&T EC Directive is in conformity with the applicable requirements of the following documents:

EN 61326 EN 61000-3-3 EN 61000-4-4 EN 61000-4-11
IEC/EN 55011 EN 61000-6-2 EN 61000-4-5 EN 301 489-1-3
EN 300 220-2 EN 61000-4-2 EN 61000-4-6 AS/NZS/IEC 60335-2-97
EN 61000-3-2 EN 61000-4-3 EN 61000-4-8 EN 60335-1

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications. The unit complies with all applicable Essential Requirements of the Directives.

Person responsible for this declaration:
Dean Janacek, Certification Manager
01.09.2012

Changes or modifications not expressly approved Tri plus grupa d.o.o. for compliance could void the user's authority to operate the equipment.



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

Operation is subject to the following two conditions:

- 1 | This device may not cause harmful interference, and
- 2 | This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1 | L'appareil ne doit pas produire de brouillage, et
- 2 | L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: Changes or modifications not expressly approved by Zipato for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

➔ DISPOSING AND RECYCLING YOUR PRODUCT



This symbol on the product or packaging means that according to local laws and regulations needs to be disposed of separately from household waste and sent to recycling because it contains electronic components. Once this product has reached the end of its life, please take it to a collection point (recycle facilities) designated by your local authorities, some will accept your product for free or simply drop it off at your Zipato re-seller store. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health. At Zipato, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimize this impact Zipato designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

➔ COPYRIGHT

© 2014 Tri plus grupa d.o.o. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form without the expressed, written permission of Tri plus grupa d.o.o.